


梅花星型螺帽套筒、起子尺寸對照表

Torx Screw and Star Socket Size Chart

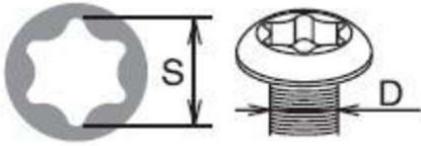

Internal Star Screw

Star Size	Point to Point (S) (mm)	Screw (D)	MAX Torque (Nm)
T6	1.6	M2	0.75
T7	2	M2.5	1.4
T8	2.3	M2.5	2.2
T9	2.5	M3	2.8
T10	2.7	M3 & M3.5	3.7
T15	3.3	M3.5 & M4	6.4
T20	3.8	M4 & M5	10.5
T25	4.4	M4.5 & M5	15.9
T27	5	M4.5 & M5 & M6	22.5
T30	5.5	M6 & M7	31.1
T40	6.6	M7 & M8	54.1
T45	7.8	M8 & M10	86.2
T50	8.8	M10	132
T55	11.2	M12	252
T60	13.2	M14	437
T70	15.5	M16	
T80	17.6	M18	
T90	19.9	M20	
T100	22.1	M22	



External Star Screw

Star Size	Point to Point (S) (mm)	Screw (D)	MAX Torque (Nm)
E4	3.8	M3	
E5	4.7	M4	
E6	5.7	M5	
E7	6.2	M6	
E8	7.5	M6 & M7	
E10	9.4	M8	
E11	10.1	-	
E12	11.1	M10	
E14	12.9	M12	
E16	14.7	M12	
E18	16.6	M14	
E20	18.4	M16	
E24	22.1	M18	